


### INVISIBLE HINGES PRO XS-4

Product code: 9810


#### Easy-Hook Light Installation

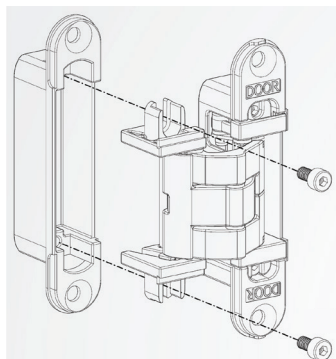


1. Separate the two parts of the hinge so that you have the part that will be installed in the door frame separate from the part that will be installed in the door panel.




2. Install the hinge part for the door frame into the door frame and the hinge part for the door panel into the edge of the door panel using the wood screws provided. Ensure these are installed at the same height.

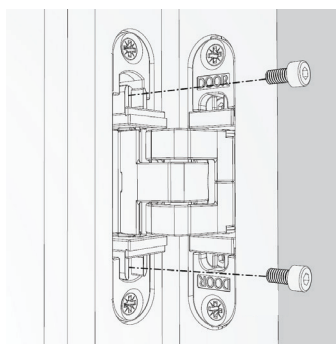


3. Insert the connecting part on the door panel side into the hollow door frame part and assemble both parts with the two machine screws using the allen key provided.

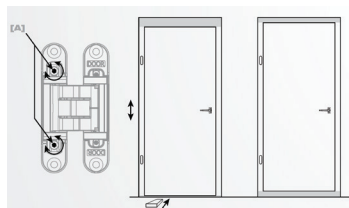

4. To adjust the height of the door panel, loosen the clamping/adjustment screws (A) by turning them anticlockwise with the allen key provided. Slide a wedge underneath the door panel to adjust the door panel to the desired height. Then turn the clamping screws clockwise until they are tightened completely.

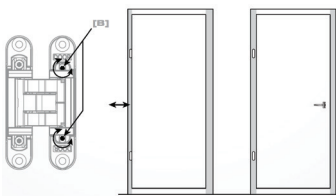


5. To align the width between the door and the frame adjust the screws (B) by turning them in the desired direction with the allen key provided. Adjust the screws on each hinge, alternating between the top and bottom screws until the same spacing between the door and the frame on both sides of the door panel is achieved.

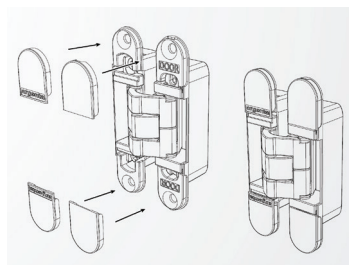

6. Place the cover plates provided onto the hinge by pushing them firmly onto the intended places. The cover plates with the logo should cover the height adjustment screws and the ones without the logo should cover the width adjustment screws.

#### Maintenance


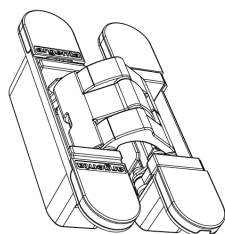


The bearings and guides are made of self-lubricating plastic argentalon®, meaning the invisible hinge needs no lubrication at all.

Verify the spacing between the door and door panel once a year and adjust if necessary.

#### Dimensions

##### Frame

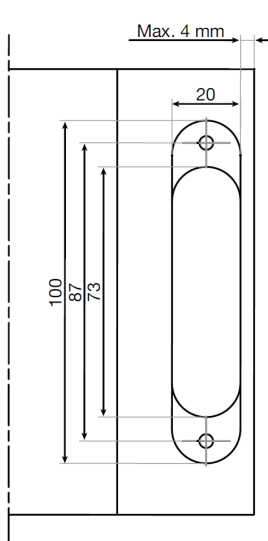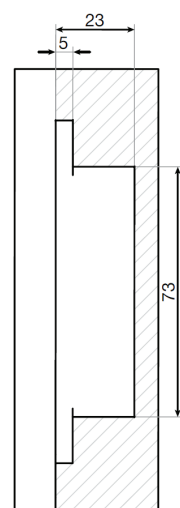

##### Door

