


### GALAXY PRIVACY SET - INTEGRATED


#### Product codes

7225, 7235, 7205, 7215, 7195, 7425, 7196, 7435, 7191, 7255

1. Measure the door thickness and mark the centre at the desired height for the latch.
2. Drill a 25mm (1") diameter hole through the door edge to a depth of at least 80mm. Ensure this hole is square to the door.
3. Mark the face of the door each side for drilling a 48mm diameter hole. The centre of the 48mm hole will need to be 60mm from the door edge (backset). We recommend using a 48mm hole saw. For clean cut-outs, drill from both sides, meeting in the middle of the door.

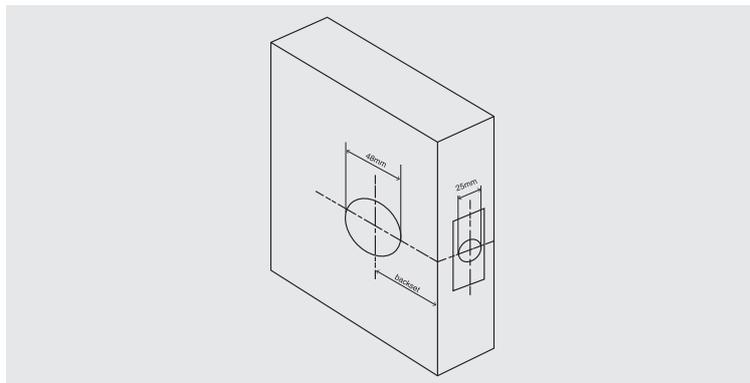


4. To change the handing of the latch, remove the outer faceplate, pull and rotate the latch tongue 180 degrees.
5. Insert the latch, scribe around the faceplate, remove, then chisel out recess to enable the latch faceplate to sit flush with the door edge.
6. Remove any loose saw dust and insert the latch, attach the faceplate and secure with the wood screws provided.

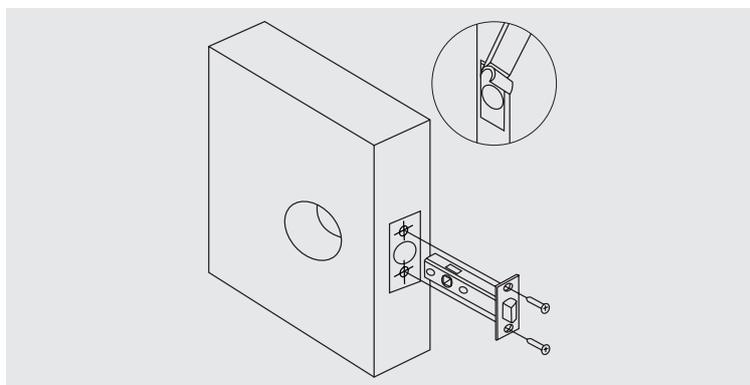


**If you wish to install your levers without the rapidFIT, please follow below instructions below on how to remove it.**

7. Insert Spindle into the latch, press small button and push through the latch until it clicks into place. Once in place, this spindle will be perfectly centred in the latch with an even amount protruding each side. Ensure the groove splits in the spindle are facing the direction of the grubscrew in the lever handle - mostly this is horizontal, however some lever handles are vertical.
8. Insert handle 'A' with rapidFIT® attached onto the spindle in the 48mm hole and press against the door.

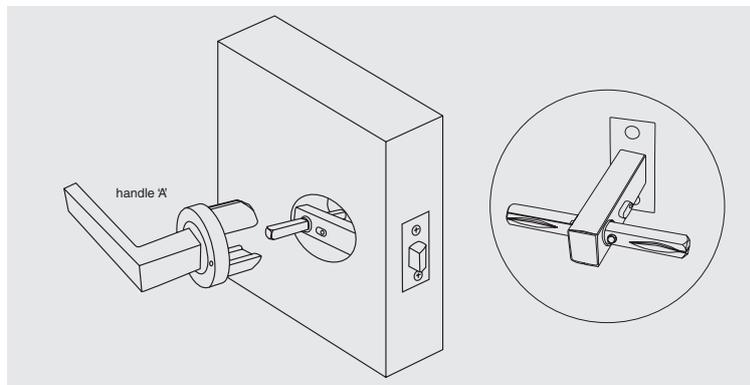

#### REMOVING RAPIDFIT


Remove the rose cover from the handle. For the round roses unscrew rose cover. For the square roses (Elite) unscrew the grubscrew on the side of the rose and pop off the rose cover.

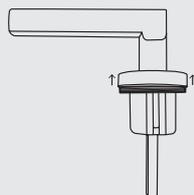

Remove the screws with the red screw head.



Remove the rapidFIT boss from the handle.

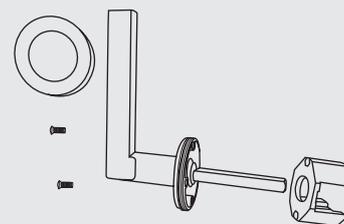

SCAN FOR FITTING INSTRUCTIONS

### GALAXY PRIVACY SET - INTEGRATED




#### Product codes

7225, 7235, 7205, 7215, 7195, 7425, 7196, 7435,  
7191, 7255

9. Insert 'handle B' over the spindle. Ensure the handles are straight before securing the through fixing screws.
10. Press the rose cover onto the handle and ensure the integrated privacy pin hole is lined up. Tighten the grubscrews on the side of the levers onto the spindle for each side of the door. For the square rose (Galaxy Elite) press on the rose cover and tighten the grubscrew on the side of the rose.
11. Insert the integrated privacy pin through the rose and into the threaded slot on the latch.

*Note: The grubscrews may need a re-tighten after a bedding-in period.  
We recommend medium strength thread-lock to be used.  
Windsor code: 1276*

12. Close the door against the frame and mark the latch position for fitting of the striker.
13. Router or chisel so the striker fits flush, allowing for the plastic dustbox behind the striker.
14. Secure the striker with the wood screws provided. Test the door and if necessary, adjust the striker anti-rattle tab to take up any rattle.

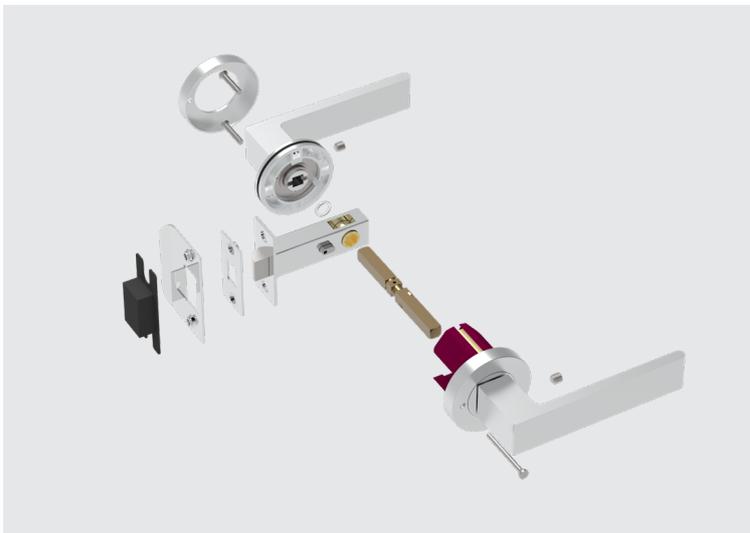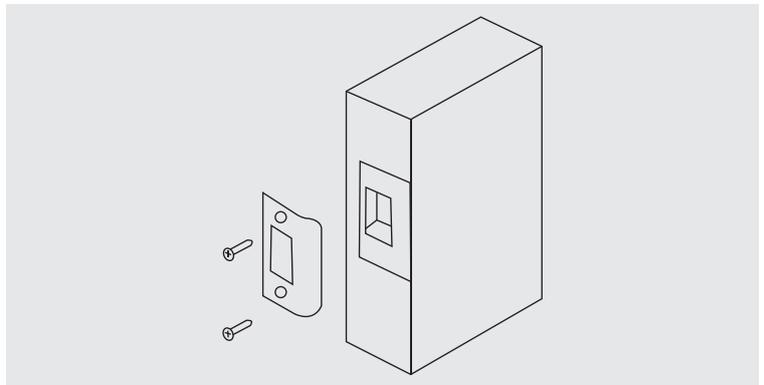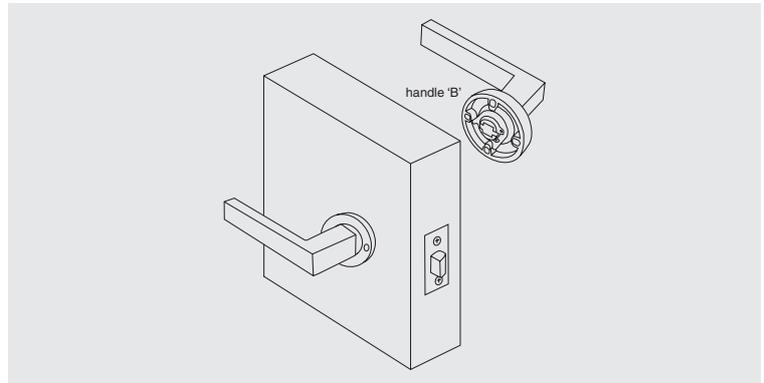

SCAN FOR FITTING  
INSTRUCTIONS