


Product Code
5690

LUME - Passage - Timber Door


Step 1 - Flush Pull Crop Out*

- Mark desired backset (35mm minimum) if installing with egde pull.
- Cut desired Rebate Option.

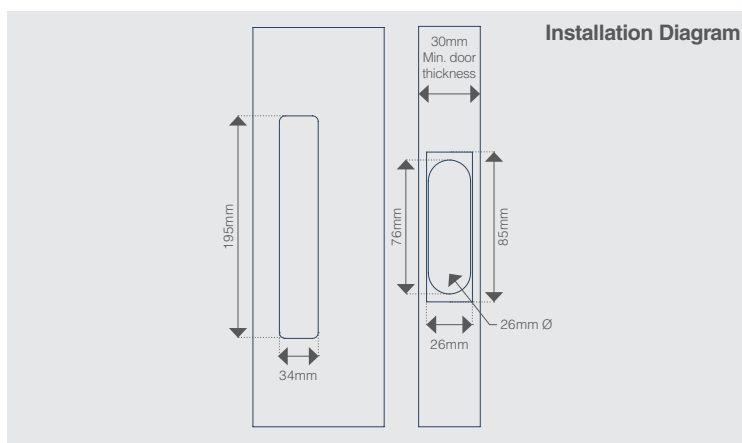


Step 2 - Install Blocks

- Apply install blocks to flush pull rebate.
- Use 4 x supplied wood screws fix vertically.
- Repeat for the opposite side.

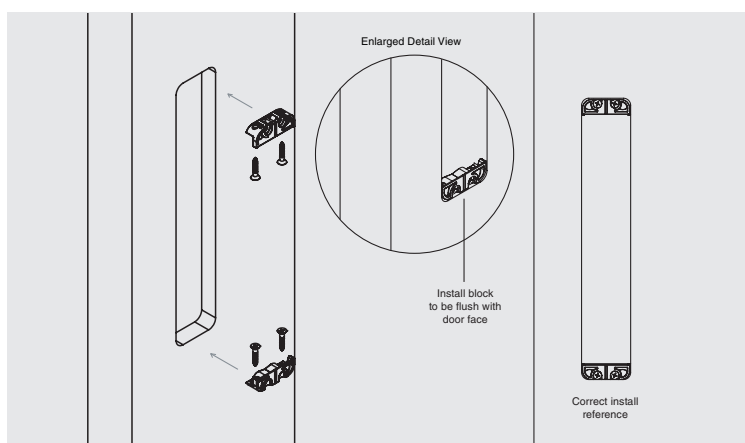


Step 3 - Edge Pull Installation

- Follow instructions from standalone 5411 / 5610 Edge Pull.

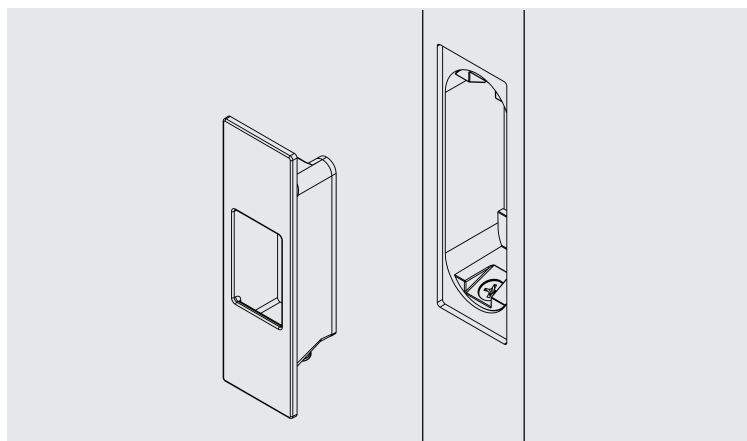

Step 4 - Flush Pull Installation

- Ensure the top fixing grub screw is flush or sub flush with face A.
- Insert the flush pull in place ensuring that face B sits hard up against the door face.
- Tighten the top fixing grub screw to lock the flush pull in place.
- Repeat steps for opposite side.

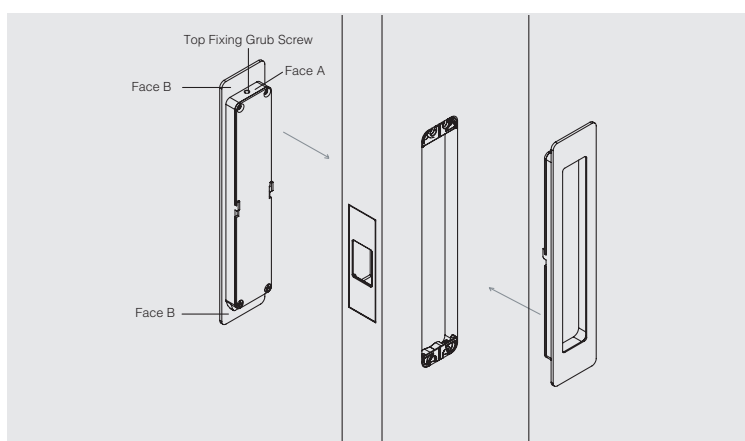


Product Code
5690

LUME - Passage - Timber Door - FLUSH PULL (200mm)

- A. Mark desired backset (35mm minimum) if installing with edge pull.
- B. Cut desired Rebate Option.

FLUSH PULL REBATE OPTION 1 (Face fixed install blocks)

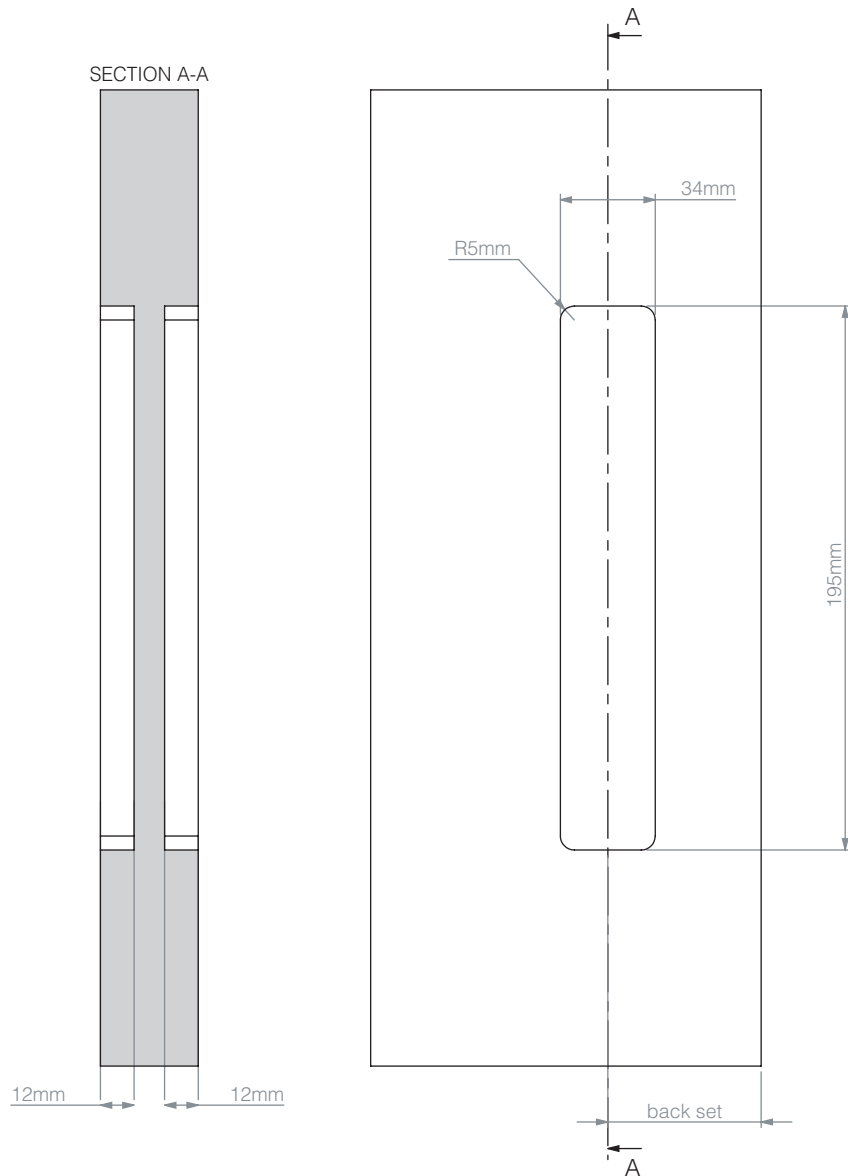

FLUSH PULL REBATE OPTION 2 (Vertical fixed install blocks)

