



CAVITY SUITES


Product codes: 5326 | 5330

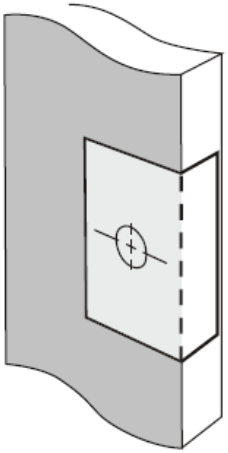


1. Scribe the required drilling centers using the template provided.

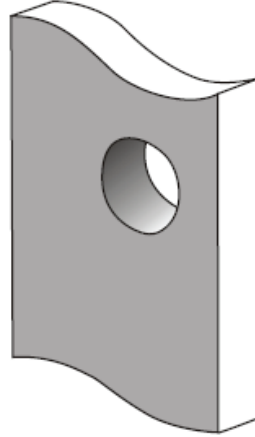

2. Drill a 54mm hole through the door. We recommend using a 54mm hole saw. For clean cut-outs, drill from both sides, meeting in the middle of the door.

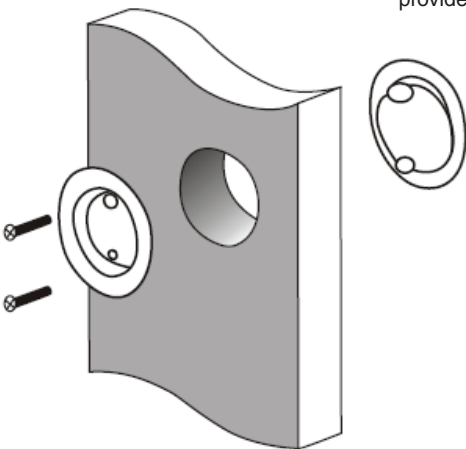

3. Secure the inside plate to the outside plate using the screws provided.

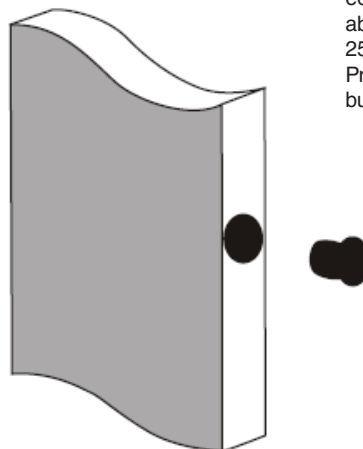

4. Fit the door edge finger pull by locating a position on the door edge approximately 150mm above the flush pull and drill a 25mm hole with a spade bit. Press in the finger pull. Use builders glue for a stronger fit.

PLEASE PRINT AT 100% SCALE

