


Futura Dummy Lever

Product codes
9018D, 9022D, 9058D, 9030D, 9036D, 9040D**Includes** Lever
Screws


1. Establish the height and position for the handle on the door.

Note: It is important to ensure solid fixing is available for handle and screws (especially for hollow core doors).

2. Drill a 18mm diameter recess on the face of the door to a depth of 5mm. Match the backset measurement of the passage doors throughout your home. Mark and drill three pilot holes, two vertically and one on the opposite side of the lever, at 42mm crs.

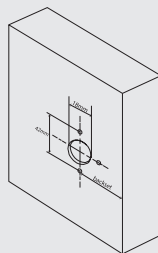

3. Install the handle by screwing the inner rose to the door with the wood screws provided.

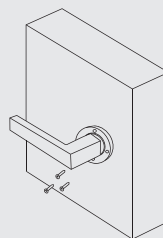

4. Screw the rose cover onto the handle.

Note: Ensure the grubscrew on the side of the lever is tight. For the Elite square rose, press on the rose cover and tighten the grubscrew on the side of the rose.

