



Traditional Longplate Lever Set**Product codes*** 3006 | 3008 | 3002
3004 | 5179 | 5073**Includes**2x Knobs/Levers (pair)
8mm Spindle

1. Establish the height and position for the handles on the door.
2. Mark the face of the door each side for drilling a 25mm diameter spindle hole.

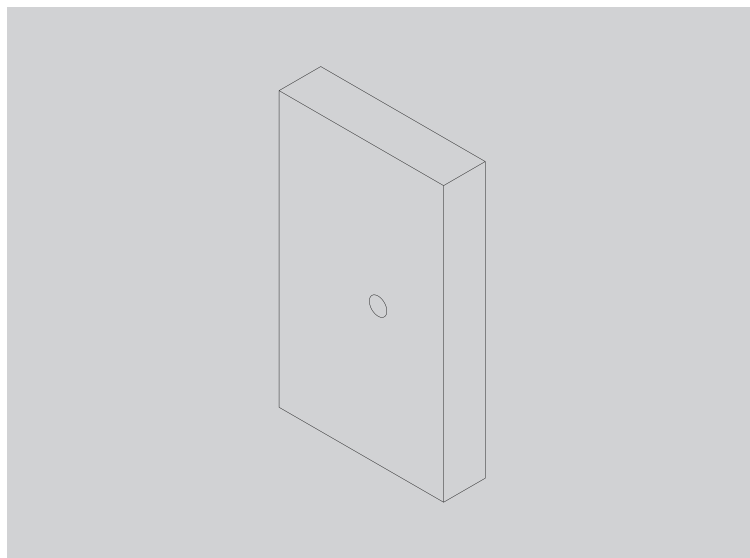

3. Mark and drill 4 pilot holes for each long plate.
4. Position the handles on the door to ensure that the spindle is attached to each rose and is centred through the spindle hole.
5. Use the wood screws provided to fix both handles to the door.

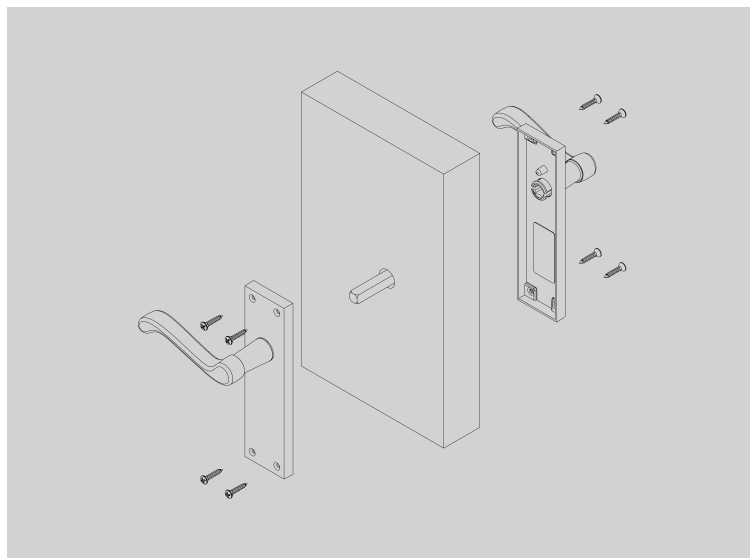

**If you have an L code refer to the fitting instructions for the mortice/lock.*