


Traditional Round Rose Lever Set

Product codes 3009 | 3010 | 5071

Includes 2x Knobs/Levers (pair)
8mm Spindle

1. Establish the height and position for the handles on the door.
2. Mark the face of the door each side for drilling a 25mm diameter spindle hole.

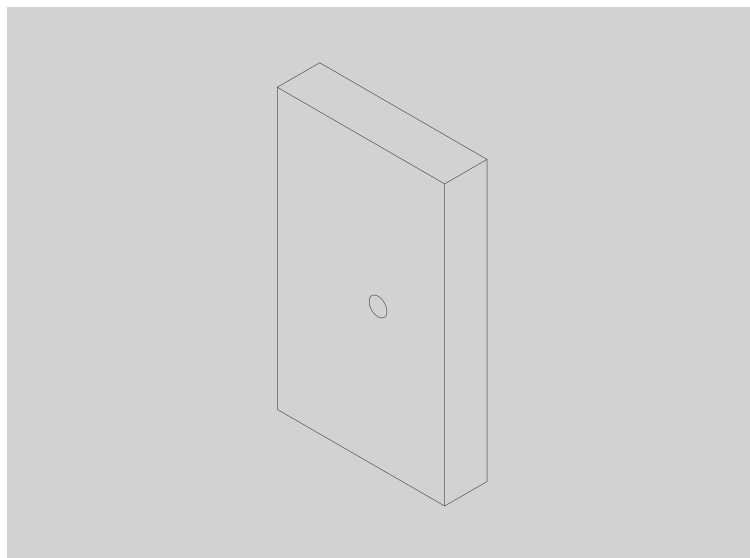

3. Mark and drill 3 pilot holes for each rose.
4. Position the handles on the door to ensure that the spindle is attached to each rose and is centred through the spindle hole.
5. Use the wood screws provided to fix both handles to the door.

